

UNICLIK Cleaning Instructions

From time to time, your trimmerhead will need a little cleaning. If you notice that your cutting lines are being thrown, it is possible that there could be dirt or grass around the jaws that need removing. When you have the trimmerhead open, please check the jaws & eyelets for any wear & tear. Replacement parts are available if required.

Cleaning the trimmer head:

- Undo the three screws on the back of your Uni Clik head. (T20 Bits are available from us)
- Take the bottom plate off
- Remove all parts from the housing (First springs, then eyelets, then teeth)
- Wash everything with warm soapy water and put it back together (First the eyelet's, then teeth, then springs). Don't use any lubricants or oil. Rotate the eyelets a third turn if they show wear.

Tips:

- Do not allow the cutting line to get too short, this will only make the job harder and the trimmer head is more likely to suck up dust and dirt.
- Store cutting line away from direct sun light.
- Only use premium trimmer line. Also available online or over the phone (Speed Blaster pre-cut line is our recommendation).

Happy Trimming!

PH. 1300 137 881

info@eurolux-australia.com.au

www.trimmerhead.com.au